

Toll free: 888-660-5892  
email: info@traxda.com

**TIRE FITMENT ADVICE**  
The best way to ensure proper tire fitment is to install the kit before purchasing your wheels and tires. Always test fit tires and wheels before purchasing.


**VEHICLE RIDE WARNING!**  
Trucks with lift or level kits installed have a higher center of gravity. Aggressive and sudden direction changes may cause a tip over.

## Rear Installation

### 405048 Chevrolet/GM 8-Lug Lift Kit

This kit contains:

- 2 - Rear Block's
- 2 - Center Pin's
- 4 - Ubolts
- 1 - Hardware
- Instructions
- Warranty Card
- Stickers

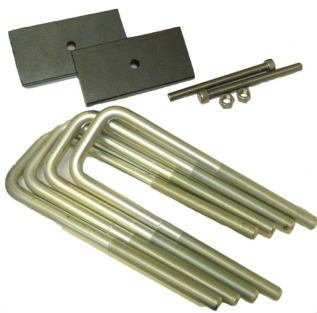

Disconnect any ABS or other wires so they can droop. Loosen lower shock bolt and remove. Use a jack to support the differential. Remove U-bolts from one side of the truck only, this will help keep the differential steady. Using C-clamps, as shown below, secure leaf springs and remove centering pin. Install Traxda block using the centering pin provided. Install supplied U-bolts, Re-connect lower shock. Repeat installation procedure on the other side of the truck.



Torque U-bolt hardware to 75 ft. lbs.  
Never reuse U-bolts

**Alignment notes:**  
We recommend that a technician with experience doing alignments on lifted trucks perform the alignment. Large tires wear differently than OEM sized tires. Always do an alignment after changing tires on a vehicle.

	Left	Right
Caster (degrees)	2	2.5
Camber (degrees)	0	-1/4 or -.25
Toe	1/32 or .03125 inch toe in	
Special Tools	none	