



# Installation Instructions - Kit # 605030 - 2013 Dodge Ram 3500 4x4 Front Level Kit

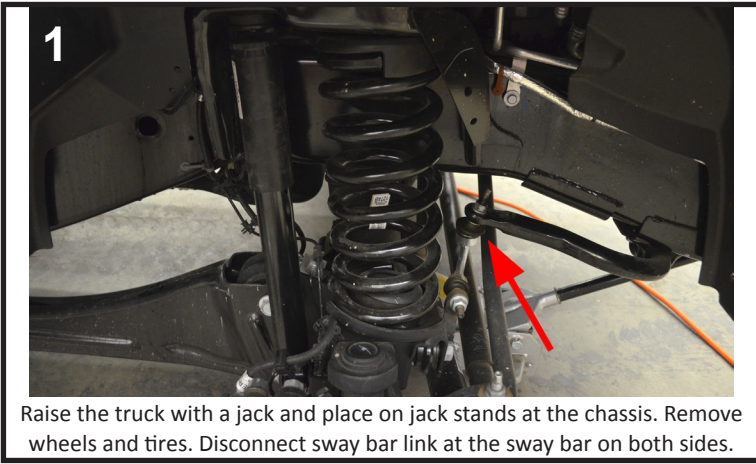

1  
Raise the truck with a jack and place on jack stands at the chassis. Remove wheels and tires. Disconnect sway bar link at the sway bar on both sides.

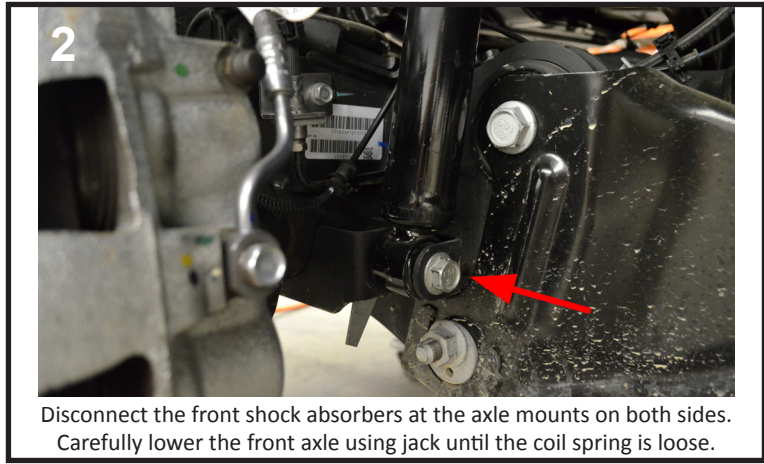


2  
Disconnect the front shock absorbers at the axle mounts on both sides. Carefully lower the front axle using jack until the coil spring is loose.




3  
Remove the coil spring and rubber spring isolator from the vehicle. Re-install the isolator onto the spring, and mount the Traxda Coil Spacer above it.

Repeat step 3 for other side of vehicle.

The stud goes through the frame where the rubber nipple previously went through. The rubber nipple goes in the hole on the spacer.

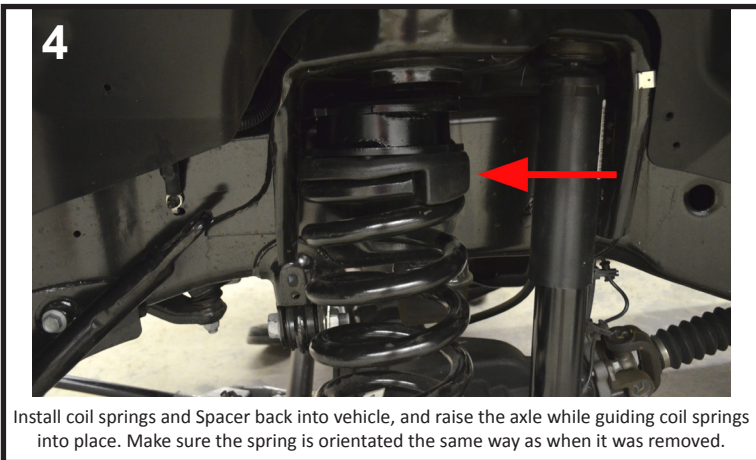

4  
Install coil springs and Spacer back into vehicle, and raise the axle while guiding coil springs into place. Make sure the spring is orientated the same way as when it was removed.

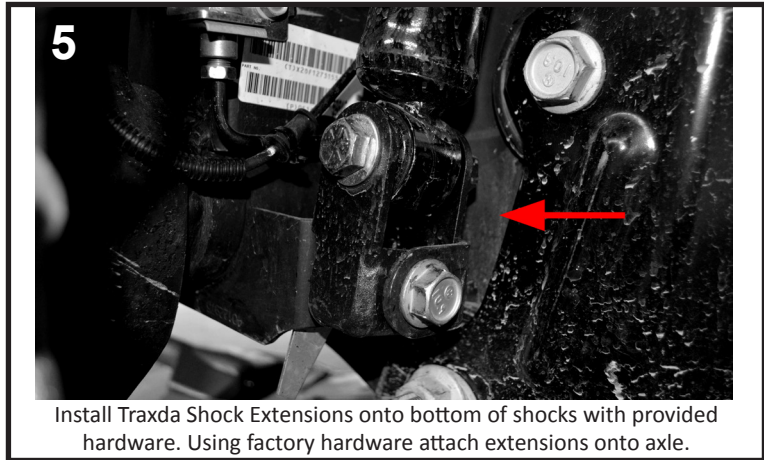

5  
Install Traxda Shock Extensions onto bottom of shocks with provided hardware. Using factory hardware attach extensions onto axle.

Re-connect sway bar links. Re-torque all hardware to factory settings. Recheck all work, and reinstall wheels. Once back on the ground, have a trained technician perform an alignment.

## Alignment Specs

	Left	Right
<b>Camber</b>	0	0
<b>Caster</b>	3	3.5
<b>Total Toe</b>	+1/16"	