

901017 Sequoia Installation

Rear Install


WORK SAFELY! SPRING COMPRESSORS ARE DANGEROUS! USE JACKSTANDS!!

Same for both driver and passenger sides

1. Remove the sway bar end links




2. Remove bottom shock mount from the lower control arms

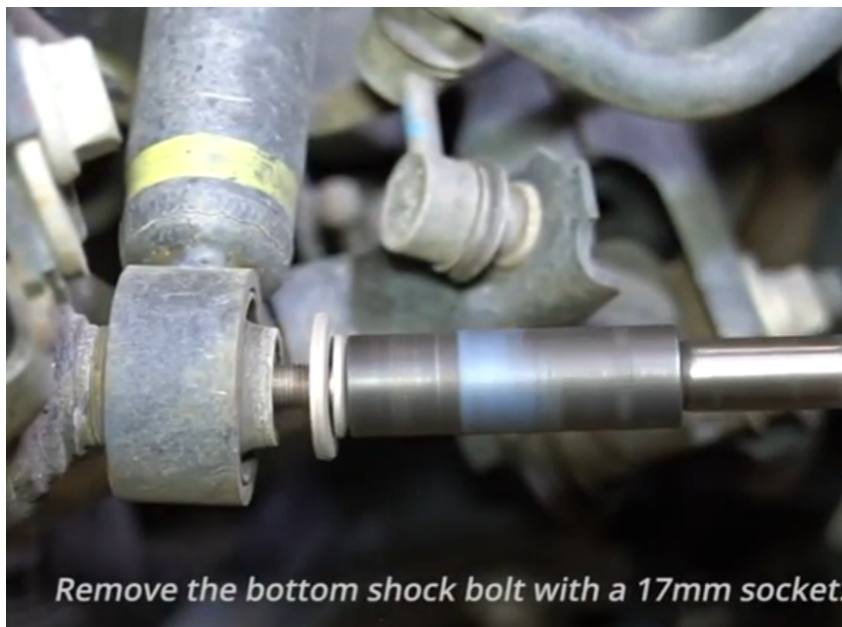

- 3.
4. Raise the rear of the vehicle and support with jack stands at each frame rail before the control arms
5. Remove the rear wheels.

6. Using a spring compressor, remove the rear coil spring.

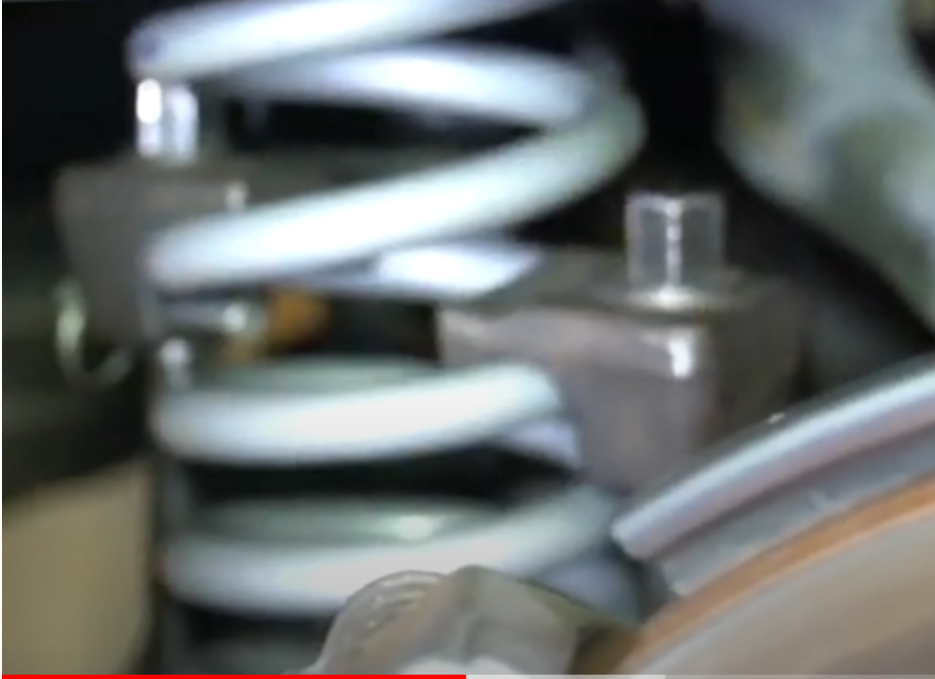

7.

8. Install the Traxda coil spring spacers on to the spring, and then install in the vehicle.
9. Release the coil spring compressor making sure the coil spring is located on the control arm correctly with the lower coil lock on the control arm.
10. Install the rear wheels and lower the vehicle to the ground.
11. Torque the lug nuts to the wheel manufacture specs.
12. Install the sway bar end links to the control arms.
13. Reinstall rear shock

Align to stock specs