

Traxda 202051-52
Rear Installation

Check alignment afterwards. Toe will change with ride height change

1.unbolt shock at top using 14mm socket




2.remove spring

- Loosen but don't remove subframe support bracket and subframe bolts
- Loosen but dont remove radius arm bolts





3.install traxda spacer above the rubber isolator

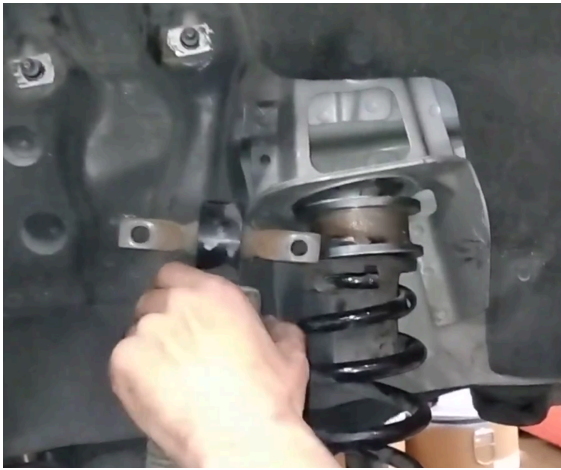

4.reinstall spring

5.install shock bracket

