


Maverick / Bronco Sport front strut.

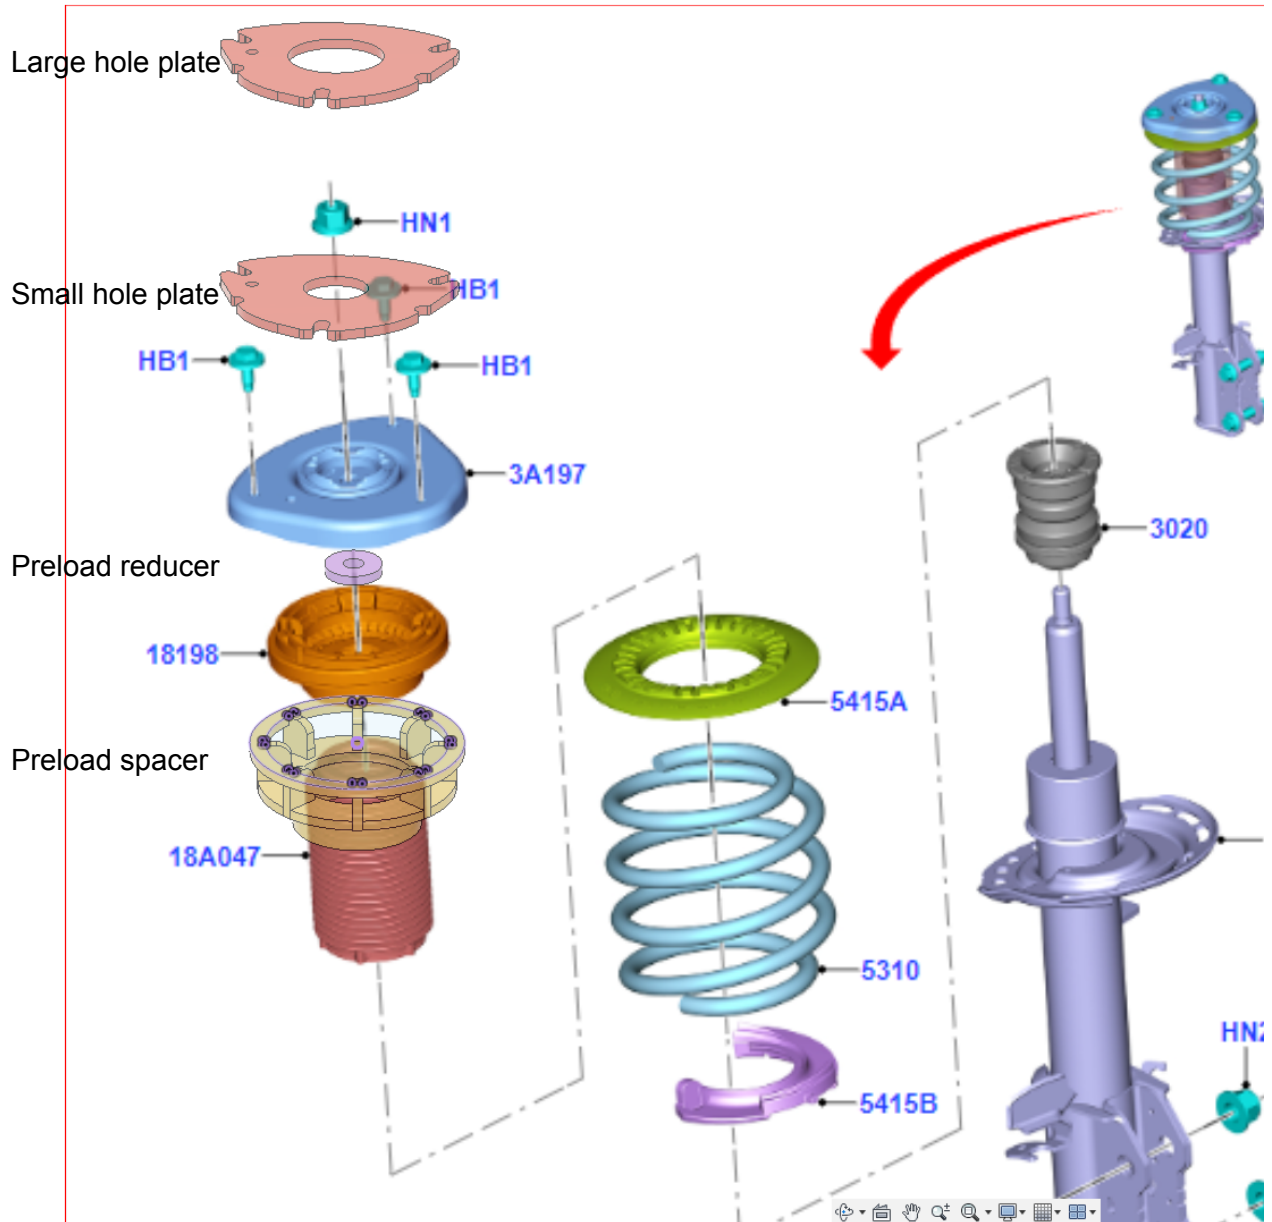


To access front struts, remove the windshield wiper cowl for bolt access.

Preload spacer fits under steering bearing, small preload reducer plate goes under strut mount.

Install 8mm bolts up through the bottom of strut mount to keep the extra plates in place while reinstalling.

Small hole plate goes against strut mount, large hole plate above that. Small hole needs to compress rubber at strut mount.

Shorter sway bar links are supplied in the kit, replace the OEM sway bar links.

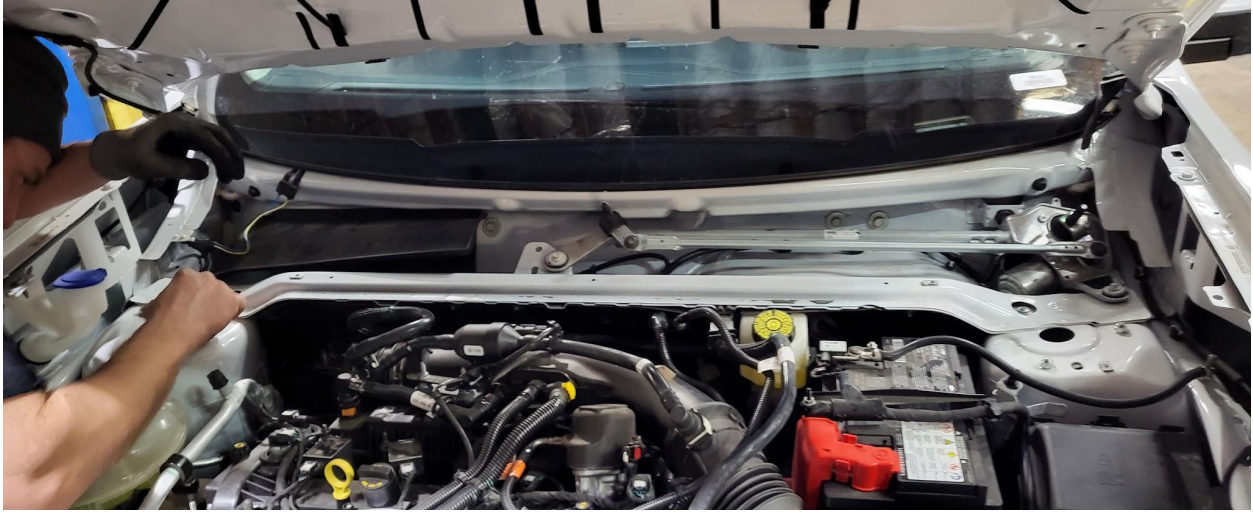

Plates for the rear go BOTH above and below the spring. 1 plate above, 1 plate below.

Rear Radius arm is dropped 1 inch using supplied spacers and longer bolts.

