


Installation Instructions - Kit # 604080 - Dodge Ram 1500 2WD Front Level Kit

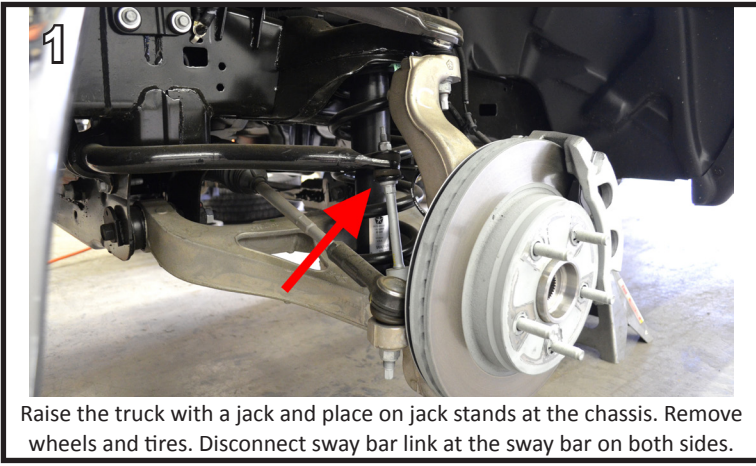


1 Raise the truck with a jack and place on jack stands at the chassis. Remove wheels and tires. Disconnect sway bar link at the sway bar on both sides.




2 Remove both front shocks. Working one side at a time, support Lower Control Arm (LCA) and remove mounting cam bolts at frame (mark the cam location first)



3 Lower the LCA with floor jack until the spring can be removed. Install Traxda Spacer as shown.

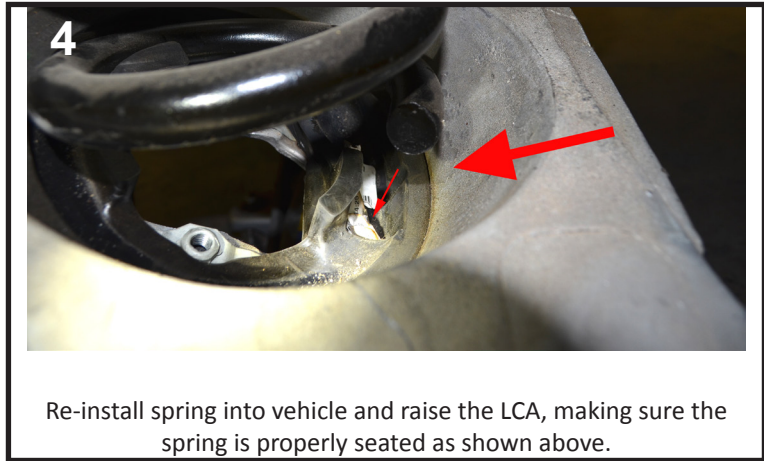

4 Re-install spring into vehicle and raise the LCA, making sure the spring is properly seated as shown above.

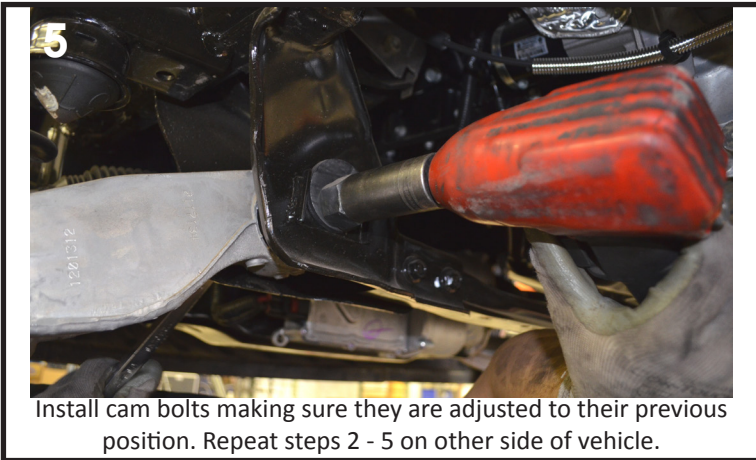

5 Install cam bolts making sure they are adjusted to their previous position. Repeat steps 2 - 5 on other side of vehicle.



6 Install the Traxda Shock Spacer as shown above.



7 Re-install shocks to the vehicle. You may need to remove a small amount from the rubber bushings to provide enough thread at upper mount to initially tighten. **Small amount of rubber removed from shock bushing.** **Make sure you have enough threads showing to start nut.**

Re-connect sway bar links. Re-torque all hardware to factory settings. Recheck all work, and reinstall wheels. Once back on the ground, have a trained technician perform an alignment.

	Left	Right
Camber	0	0
Caster	+4	+4.5
Total Toe	+1/16"	